



Waterproof Tileable Curb Installation Manual



Manual Contents:

- 1.1P - Necessary Tools and Materials
- 1.2P - Installation of Curb



scan for most current
installation manuals



WWW.UBERTILE.COM

The information pertained within this guide is for reference only and does not supersede instructions from other product manufacturers or building codes.

Always consult and follow manufacturers specific installation and safety instructions BEFORE installing any products.


übertile™ bears no responsibility or liability for damage(s) resulting from the contents contained within this manual.

Information may change without notice. Visit www.ubertile.com for most current revision.

All tasks performed by the product user are at the own risk and liability of the user.



1.1P - Necessary Tools and Materials

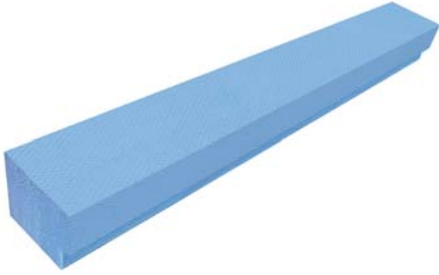

Ubau™ Shower Curb



Modified Thinset Mortar
ANSI A118.4 or A118.15



überseal™
for non-steam shower
applications


Required tools:



Tape Measure



Hand Saw

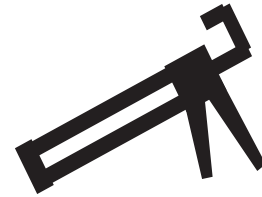


Caulking Gun



Marker / Pencil




überseal™
spreading tool

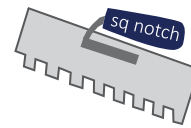


3/8"x3/8" sq
notched trowel


1.2P - Instructions- Cutting Ubau™ Curb to size

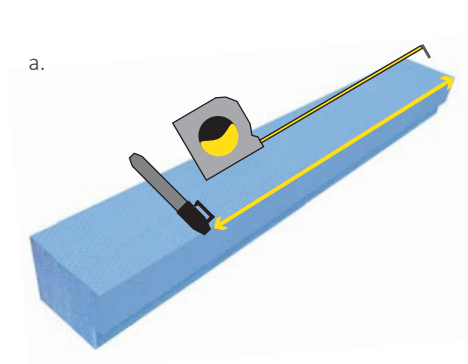

Measure "Ubau™ Shower Curb"

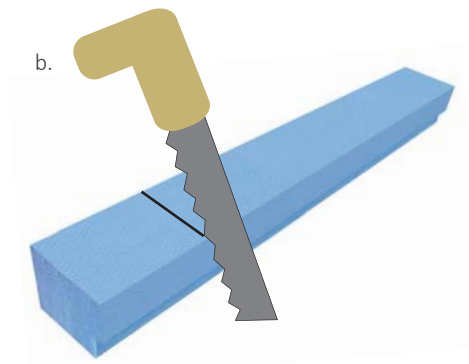


Use "Hand Saw" to cut.

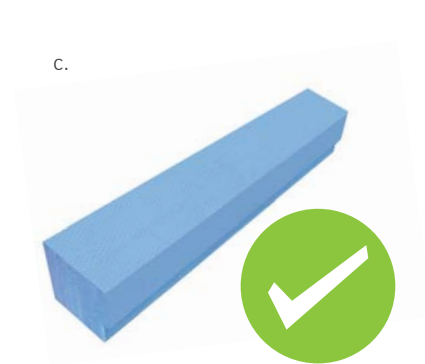


Installation: Step 1.

a.

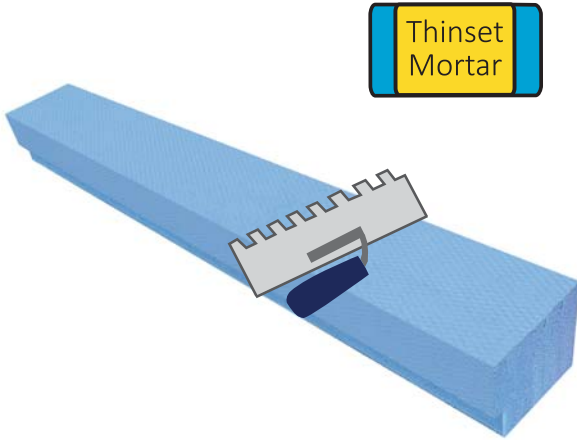

Using the **flatside** of the trowel, spread **“Tiling Thinset”** onto the **underside** of the **“Ubau™ curb”**.


b.

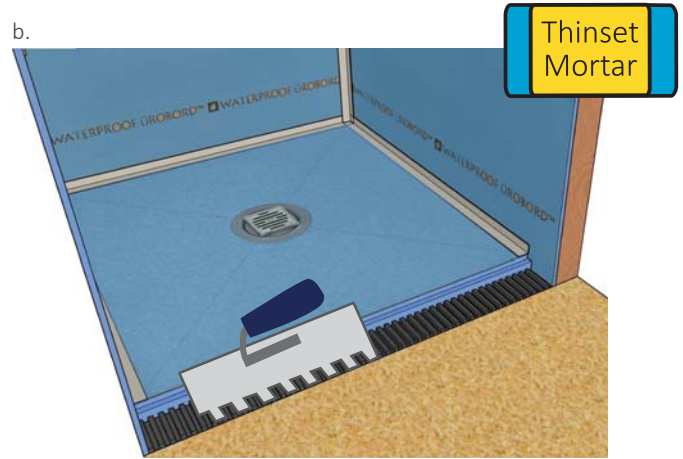

Using a **“3/8 x 3/8 notched trowel”**, spread **“Tiling Thinset”** onto the subfloor.


Installation: Step 2.

a.

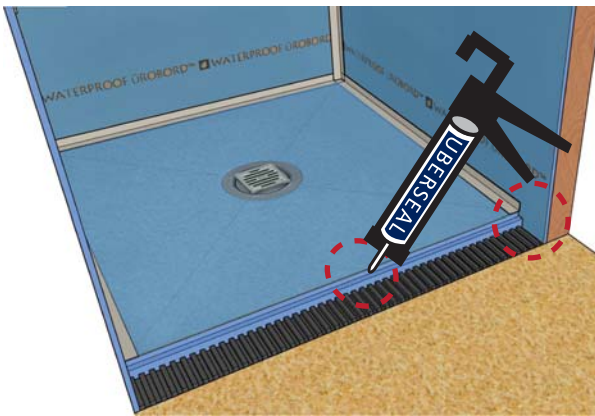

Apply a generous bead of **“überseal™ sealant”** to the groove on the **“Flo™ Shower Pan”** and where the **“Ubau™ Curb”** will meet the wall.


b.

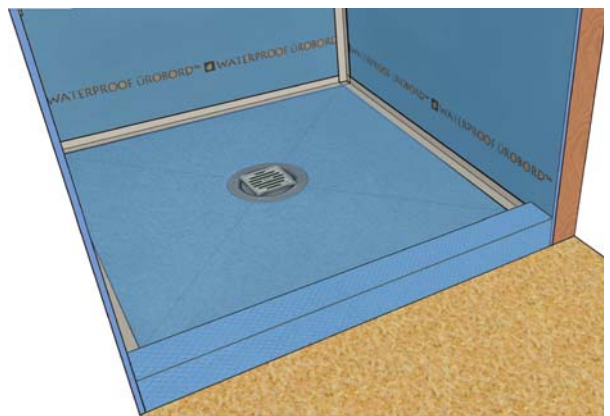

Install the **“Ubau™ Curb”**, pushing firmly into place.


Installation: Step 3.

a.

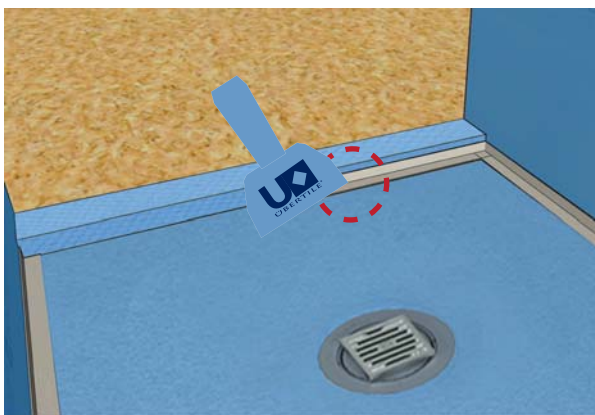

Spread **“überseal™ sealant”** flat, so it spreads a minimum **1”** up the curb and **1”** onto the shower base. If necessary apply additional **“überseal™ sealant”**.

b.

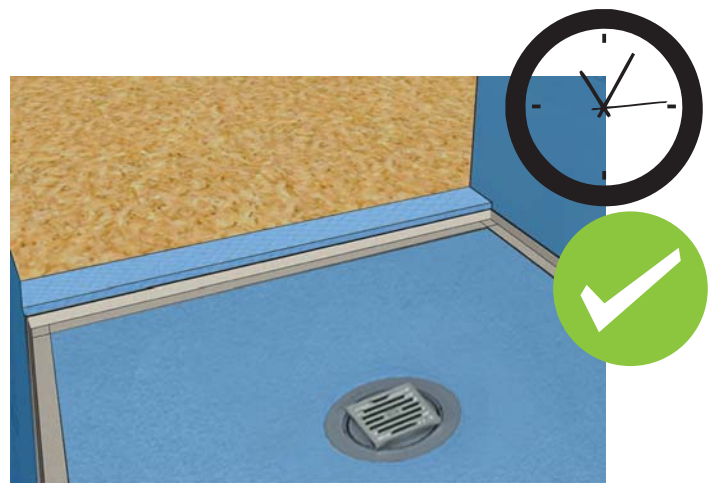

Wait **24hours** before tiling or flood testing.