


Niche Installation / Instruction Manual

Required materials:

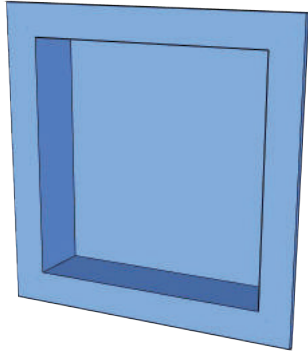

übertile™ niche



überseal™
joint sealant



XPS screws/washers
(for wooden studs)


Required tools:




Tape Measure



Power Drill

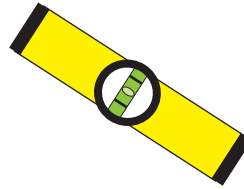

Spirit Level

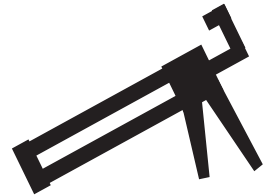

Caulking Gun



Utility Knife



Marker / Pencil



überseal™
spreading tool


Substrate requirements:




Minimum stud spacing is 16" O.C
Wood studs, or heavy gauge steel studs.

The "Niche" is intended to be installed
into a Waterproof Tile Backerboard

Installation: Step 1.

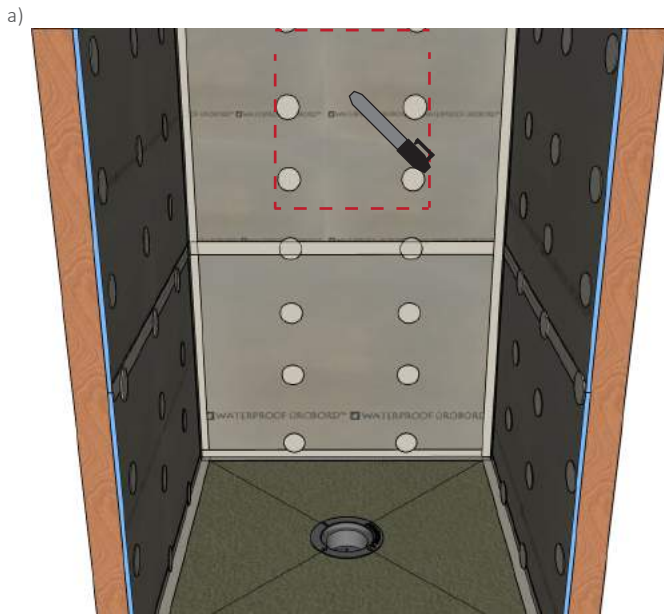

Use the **"Niche"** to trace the correct cutout size onto the wall.
The cut lines must be directly in the middle of 2 studs, to allow a sufficient anchoring point for the **"Niche"**.

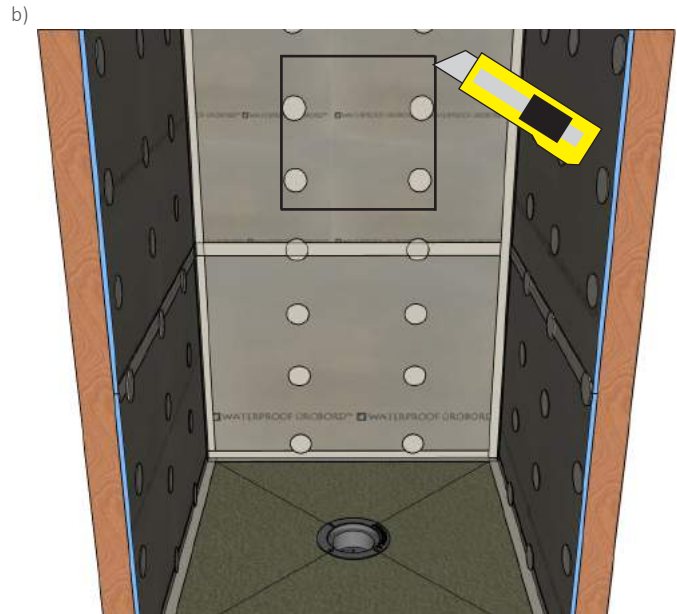


Cut out panel using a **"Utility Knife"**.

Installation: Step 2.




Apply **"überseal™ sealant"** to all 4 inside edges of the hole.

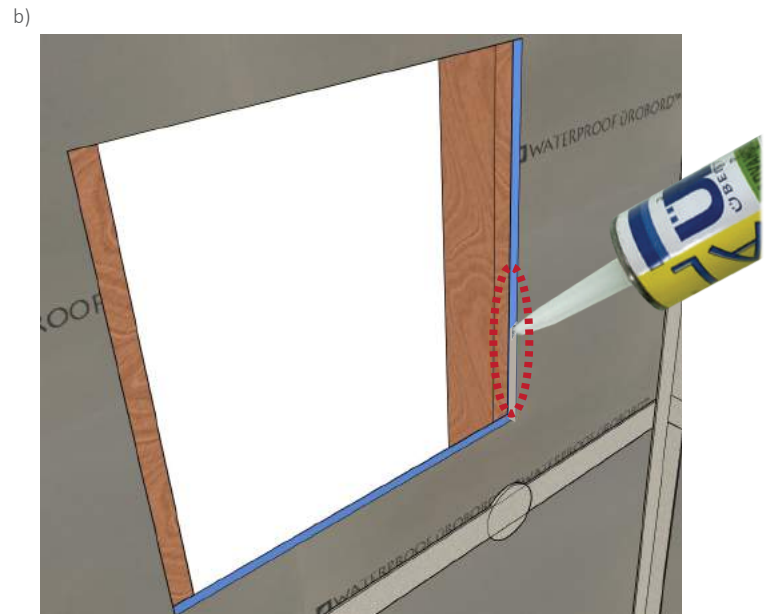


Note the **"überseal™ sealant"** must be applied to the 1/2" thick portion of the exposed panel.

Installation: Step 3.

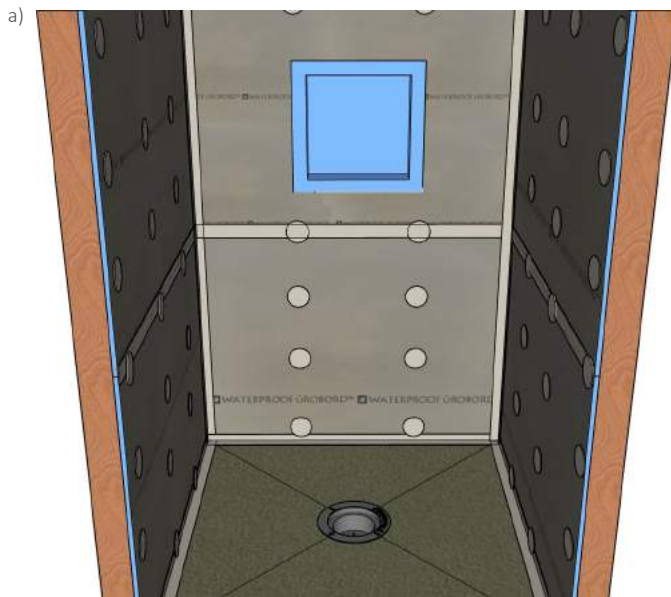


With the **“überseal™ sealant”** still fresh, insert the **“Niche”** into opening, pushing firmly into position.

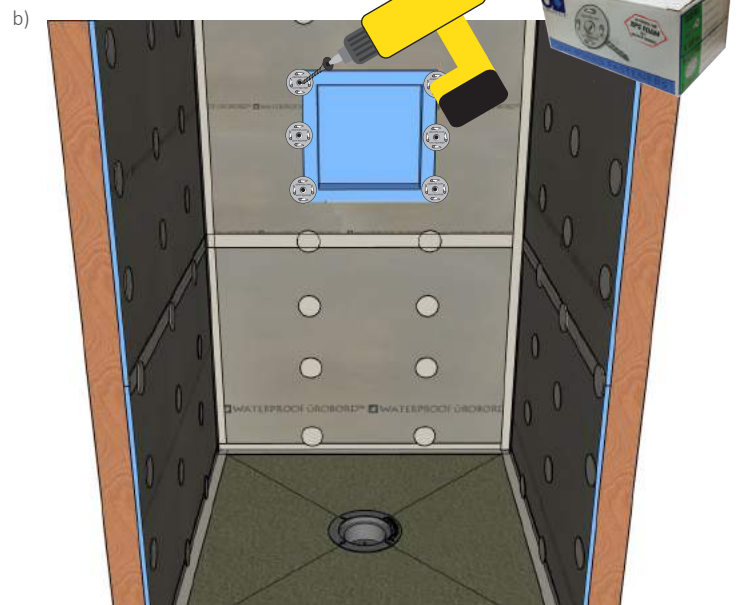


Using the **“XPS screws/washers”** fasten to the middle of the studs at a rate of every 6”.

Installation: Step 4.

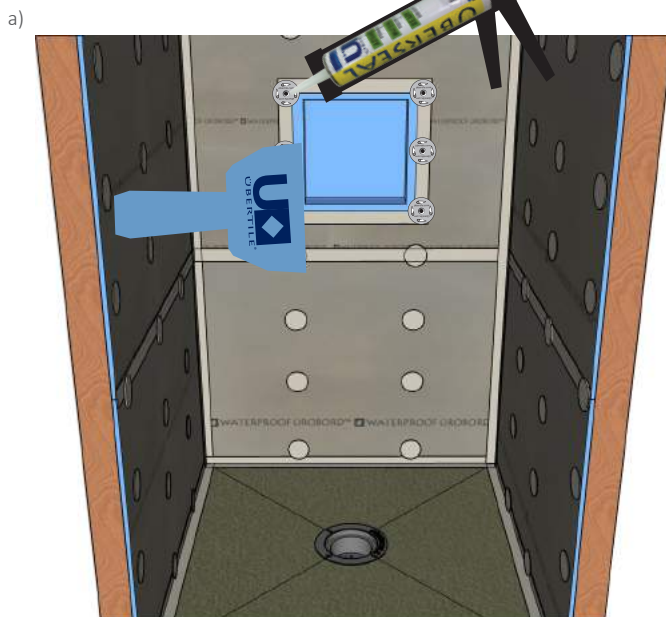


Apply a generous bead of **“überseal™ sealant”** onto all the **“Niche”** seams, and overlap of the **“XPS screws/washers”** heads.

Smooth **“überseal™ sealant”** flat with a trowel, so it overlaps a minimum 1” onto both surfaces.

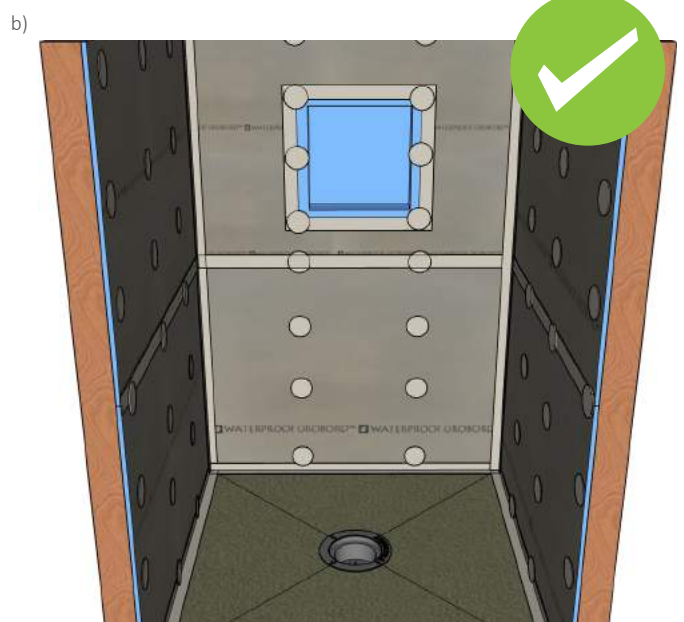

Wait 24hours before tiling.

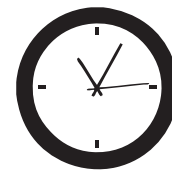

Installation: Step 5. (large niche only)

The **“Large Niche”** has an adjustable shelf. To install the shelf:

- Apply a generous amount of **“überseal™ sealant”** to the contact area of the shelf.
- Insert the shelf into the fresh **“überseal™ sealant”**
- Spread any excess **“überseal™ sealant”** smooth/flat