




UberTile Uberboard™ with a Bathtub Vertical Flange Installation Manual

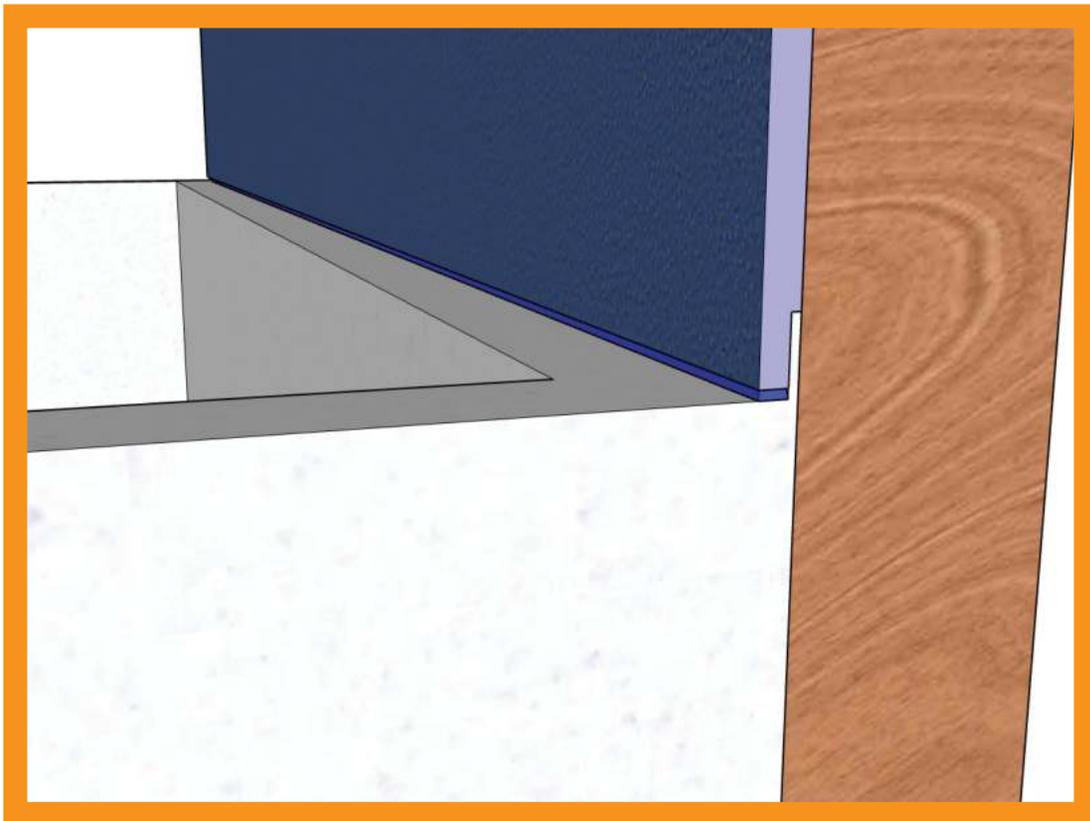

1.1BT - Required Products, Tools, Materials, Safety

Required Tools:



Tape Measure



Utility Knife



Marker / Pencil

Required Materials:



überseal™
for non-steam shower
applications



painters / masking tape

Required Safety :



Protective Gloves
while handling & cutting



Hearing Protection
while handling




N95 Mask
while cutting




Protective Eyewear
while handling & cutting


3.1BT - Cutting Uberboard™ to fit the Bathtub Vertical Flange

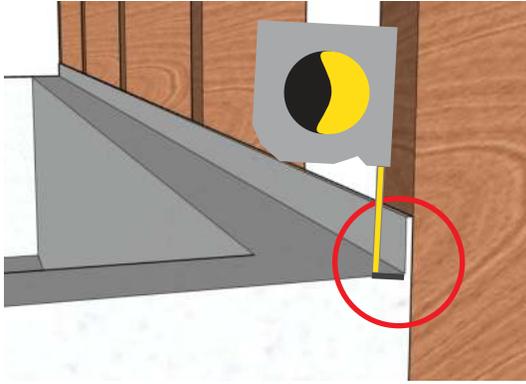


1. Measure the dimension of the Bathtub Vertical Flange.

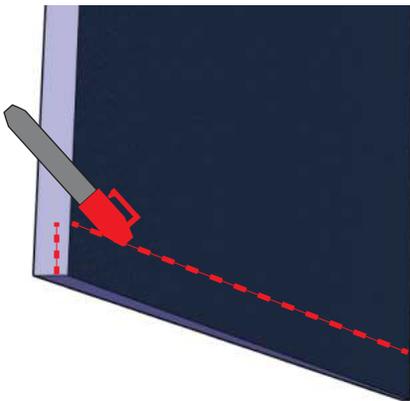



2. On the backside of the Uberboard™ panel mark the dimensions of the Bathtub Vertical Flange.

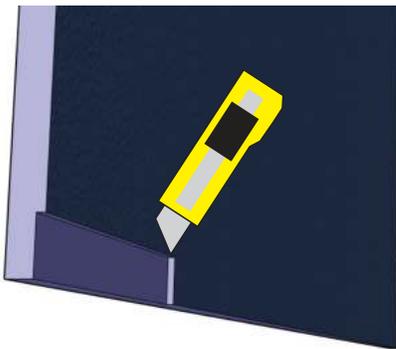

3. Use a Utility Knife (or a table saw if you want to be fancy) to cut the backside of the Uberboard™ panel, leaving a groove which will fit / contour to the shape of the Bathtub Vertical Flange.


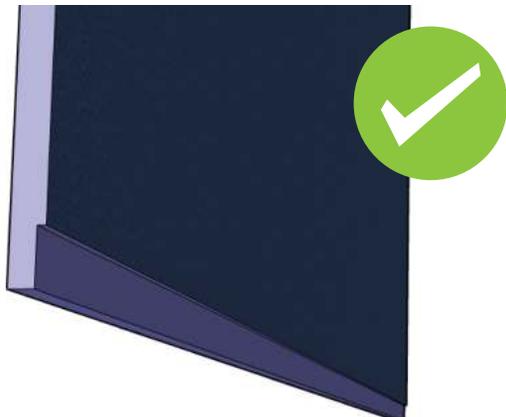


2.1BT - The Basics: Do's and Don't

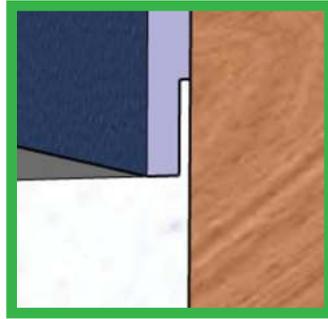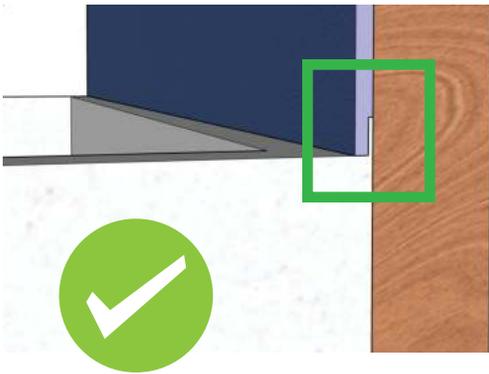



DO

Cut out the backside of Uberboard™ to contour to the shape of the Bathtub vertical lip.

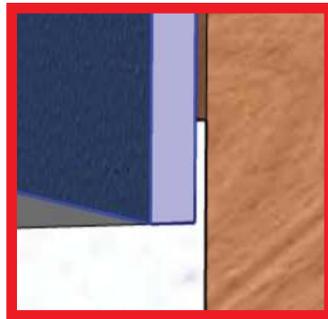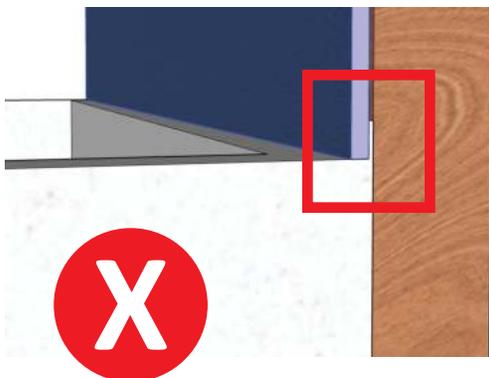

DON'T


Install Uberboard™ without contouring the backside of the Uberboard™ panel as the panel to the shape of the Bathtub vertical lip.

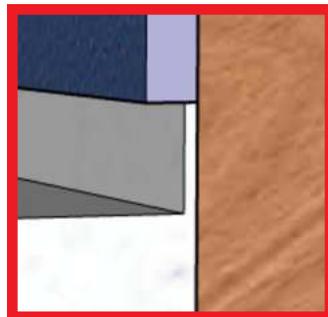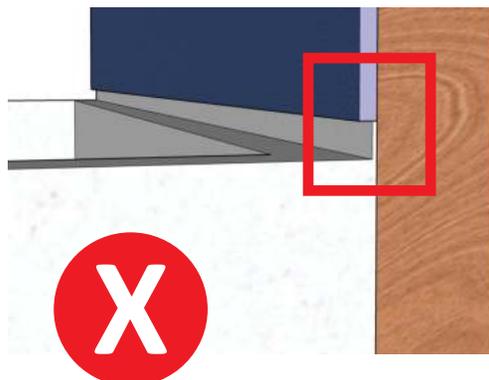

DON'T

Install the Uberboard™ ontop of the Bathtub vertical lip.


4.1BT - Installation of Uberboard™ on a Vertical Bathtub flange

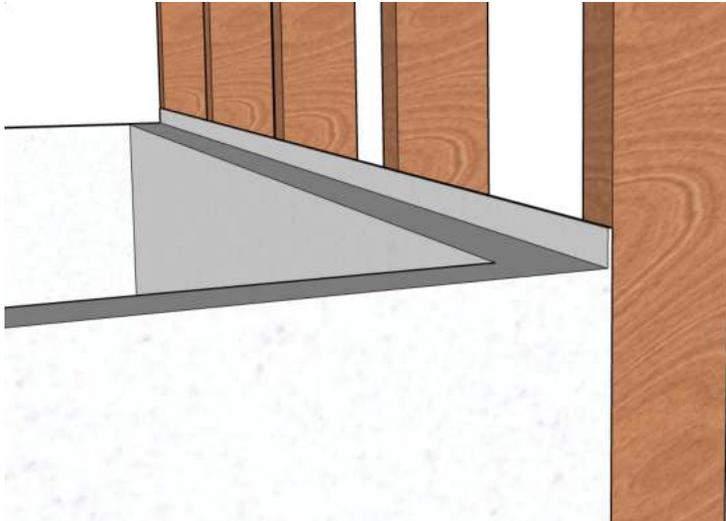

1. A Bathtub used as a “Tub/Shower” MUST have a vertical flange which extends upwards a minimum 25mm (1”) upwards from the Bathtub deck.


The Bathtub vertical flange must be present on 3 sides of the Bathtub:

- backside
- left side
- right side

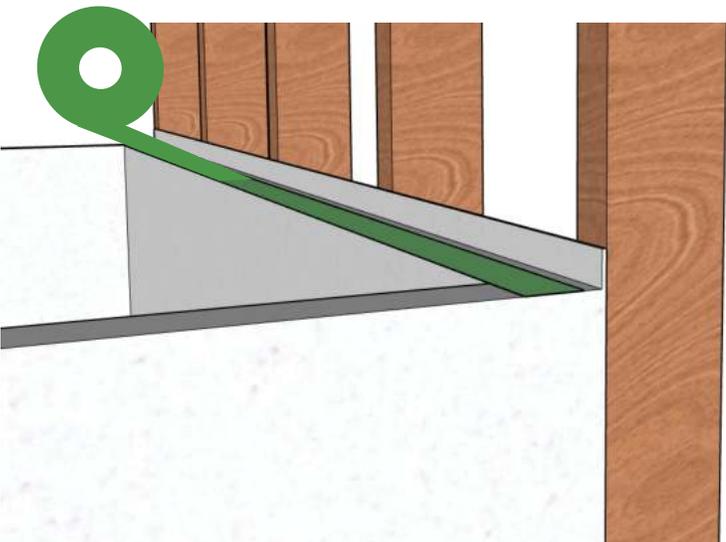


2. Apply painter's tape onto the bathtub surface, setback 12.5mm (1/2”) from the Bathtub's vertical flange.

This is to protect Uberseal™ from spreading onto the tub surface.

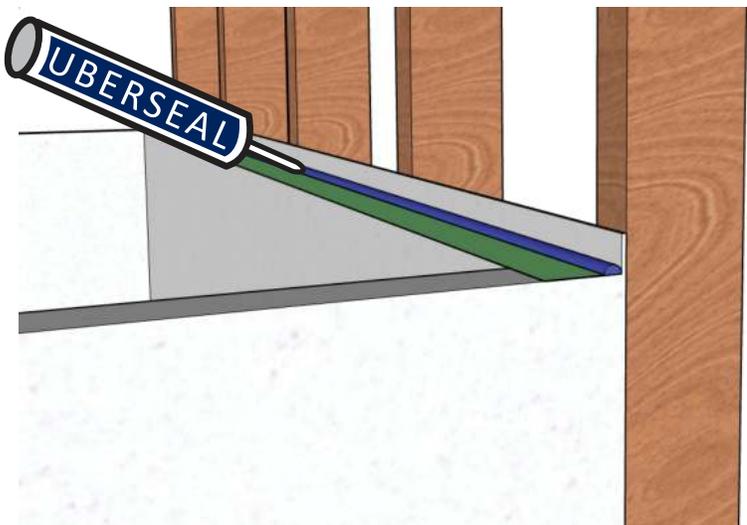


3. Apply a generous bead of Uberseal™ onto the surface of the Bathtub where the 1/2” Uberboard™ panel will be installed.

4.1BT - Installation (continued)

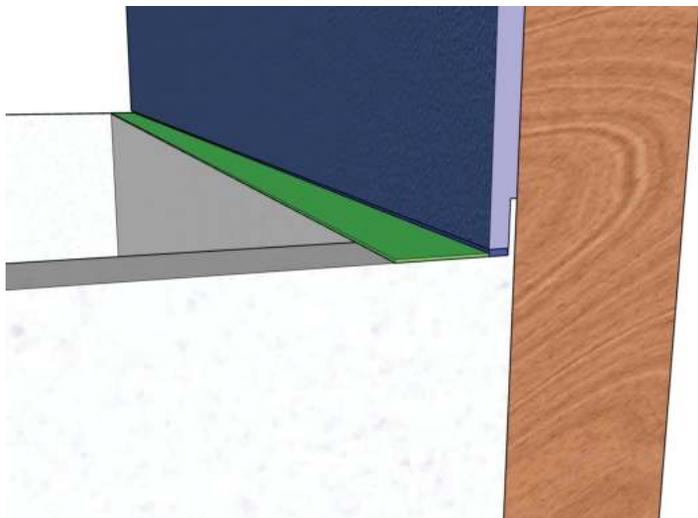


4. With the Uberseal™ still wet, place the Uberboard™ panel into the Uberseal™.

Fasten the Uberboard™ panel to the studwork per the Uberboard™ installation manual.

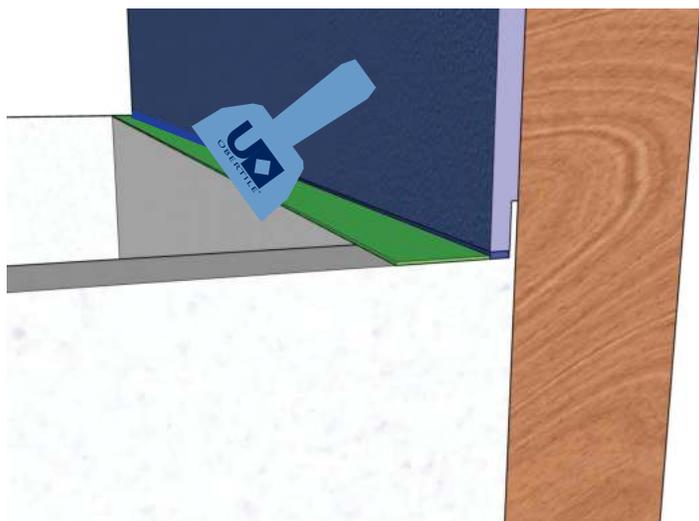

5. With the Uberseal™ still wet, spread the Uberseal™ flat, ensuring not to spread Uberseal™ onto the finished surface of the Bathtub; The painters tape should protect the finished surface of the Bathtub.

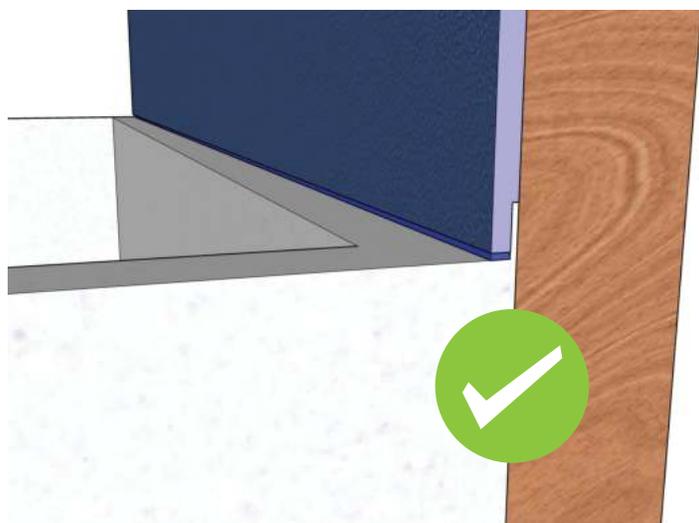

6. With the Uberseal™ still wet, remove the painters tape.