


Waterproof Fabric

Installation Manual

Contents:

Section 1 VWPF- Installation

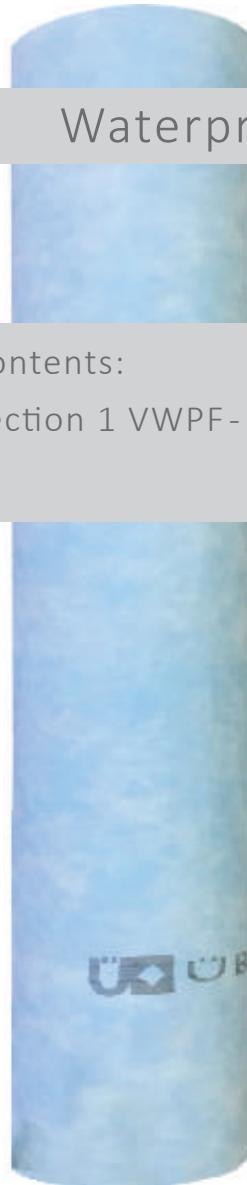

WWW.UBERTILE.COM

The information pertained within this guide is for reference only and does not supersede instructions from other product manufacturers or building codes.

Always consult and follow manufacturers specific installation and safety instructions BEFORE installing any products.

übertile™ bears no responsibility or liability for damage(s) resulting from the contents contained within this manual.

Information may change without notice. Visit www.ubertile.com for most current revision.

All tasks performed by the product user are at the own risk and liability of the user.



Section VWPF 1.2 - Required materials

 **Warning:**



**DO NOT use
with
überseal™ sealant**

Required materials:




Ubertile
Fabric
36" wide




Ubertile
Fabric
6" wide



Ubertile
Fabric Corners
Inside / Outside

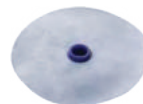

Mixing Valve &
Pipe Seal

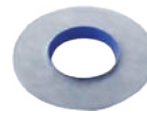

Modified Thinset

Non-steam shower use:
ANSI A118.4 or A118.15

Intermittent Steam shower use:
ISO 13007 C2TES2

Required tools:




Tape Measure



Marker / Pencil



Utility Knife
or Scissors

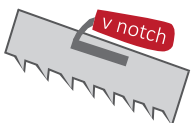

1/4"x3/16"
V-Notched Trowel



Flat Trowel

Warning:

For model specific installation instruction which requires the use of the Ubertile Waterproof Fabric, view separate product installation guide for full detailed instruction. Example: Uberboard Vapor Panel installation manual.

Ubertile fabric is only intended for steam shower use when combined with the Uberboard Vapor Panel panels.

Suitable backings wall (interior use only):

- All backings must be load bearing for the intended weight of tile, clean, dry and free of bond breakers.
- Drywall (with appropriate surface primer applied)
- Cement backer board
- Uberboard™ Classic Panels
- Uberboard™ Tech Panels
- Uberboard™ Vapor Panels


Suitable backings floor (interior use only):

- All subfloor must be load bearing for the intended weight of tile, clean, dry and free of bond breakers.
- Cement backer board
- Concrete slab (broom finish)
- Exterior grade APA rated T&G plywood
- Uberboard™ Classic Panels
- Uberboard™ Tech Panels
- Uberboard™ Vapor Panels
- Ubau Flo™ Presloped Shower Pans


Suitable adhesives (interior use only):

- Always refer to adhesive manufacturers data sheet to verify suitability prior to using
- Non-steam shower use: ANSI A118.4 or A118.15 thinset
- Intermittent Steam shower use: ISO 13007 C2TES2 thinset (only when used with the Uberboard Vapor panel system)

Cutting Fabric:

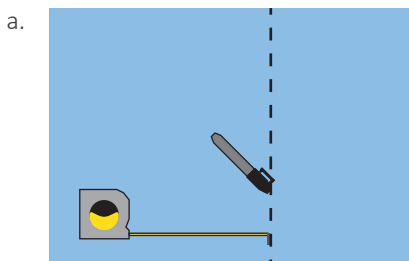


Measure and mark sheet.


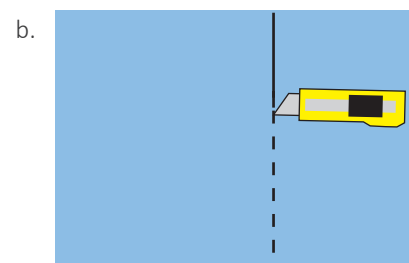


Cut with a **utility knife** or scissors.


Section VWPF 1.3 - Installation

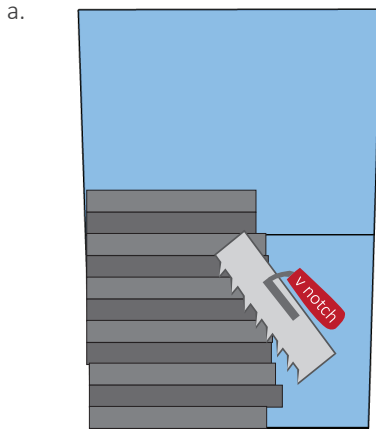


Using a **1/4" x 3/16" V-notch Trowel**, spread **Thinset** onto the approved surface.

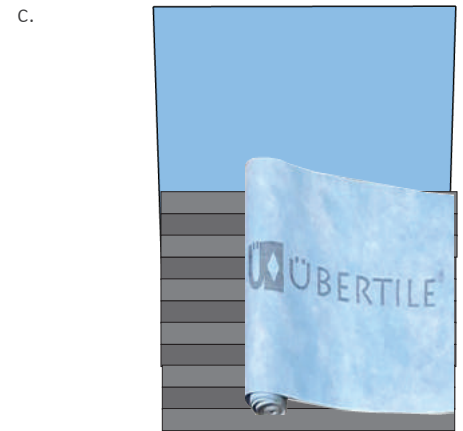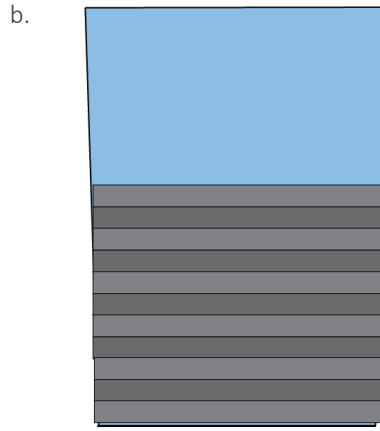


Apply **Ubertile Fabric** into still wet **Thinset**.

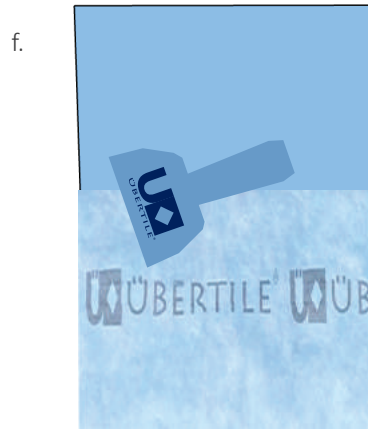


Using a flat trowel, smooth out the **Ubertile Fabric**, pressing out air pockets and excess **Thinset**, to leave a smooth, flat surface.

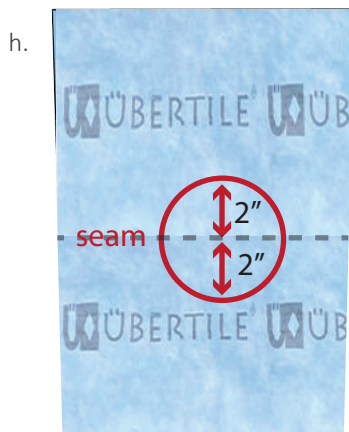

All seams or intersections of **Ubertile Fabric**, must be covered with **Ubertile Fabric** with a minimum 2" overlap onto each surface.

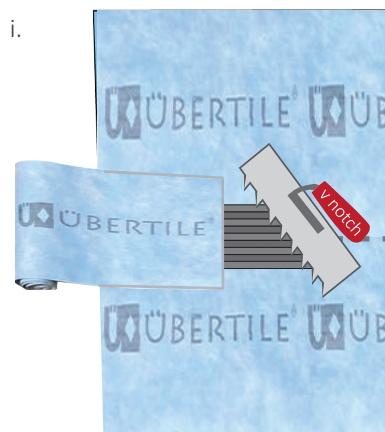

Use the same method as described above to install **Ubertile Fabric** to the seams.

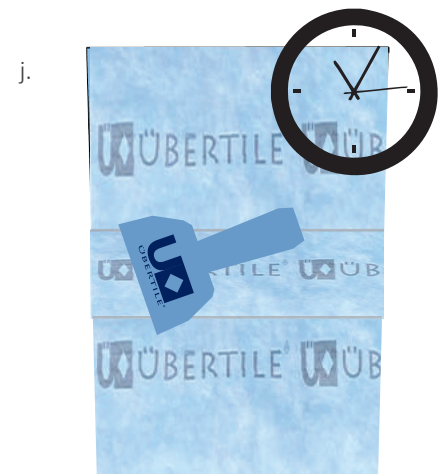

Use the same method as described above to install the **Inside and Outside Fabric corners**.

Wait 24 before flood testing.

Important information:

- Tile Requirements:
 - Tiles must be rated for appropriate use
 - Maximum allowable finished tile weight (including grout and setting materials) is 7lbs / sqft.
 - The minimum tile size is based on the backing type and must be verified by backing manufacturer.
 - There is no maximum tile size, however use of larger tiles requires a greater tolerance of surface flatness when installing the tiles to ensure adequate thinset coverage.
- Not for use with Uberseal™ sealant!
- Not for steam shower use, unless used in conjunction with Ubertile Vapor Panels, per specific Ubertile Vapor Panel installation manual
- NEVER use with mastic(s), premixed or solvent based adhesives
- Movement joints (ie silicone caulk) must be included in the finished tile installation at all changes or intersections in plane.
- Do not expose any parts of the products to solvents, or temperatures over 45 degrees Celsius
- When storing for a long duration of time, store away from UV light (sunlight)
- Follow all applicable building codes, TTMAC , NTCA and / or TCNA requirements
- For interior use only
- Uberboard Waterproof Fabric is part of a complete system of Ubertile waterproofing products.
See www.ubertile.com for full product catalog, installation manuals, etc.